

Manual

RS422 > Centronics Interface



Type
Release

62008
1.3

© 07/2004 by Wiesemann und Theis GmbH

Subject to error and alteration:

Since it is possible that we make mistakes, you mustn't use any of our statements without verification. Please, inform us of any error or misunderstanding you come about, so we can identify and eliminate it as soon as possible.

Carry out your work on or with W&T products only to the extent that they are described here and after you have completely read and understood the manual or guide. We are not liable for unauthorized repairs or tampering. When in doubt, check first with us or with your dealer.

Interface RS422 > Centronics

Function

Interface 62008 allows you to connect parallel printers or plotters to any data source to a serial RS422 port. Installation requires that the data format of the interfaces be adapted to the format of the data source. The serial parameters can be set either using DIL switches inside the port (see table) or using automatic format detection in „Learn-Mode“.

Learn-Mode: To initialize Learn Mode, the black button on the side of the interface converter must be actuated when the port turns on. After releasing the button the current setting of the port is output on the connected printer. Following this, approx. 1 page of any desired text should be sent to the interface for the purpose of format detection. The serial parameters which are detected are automatically stored in a non-volatile EEPROM. The next time the port is activated (button does not need to be pressed), the port carries out its normal function using the newly detected parameters. Learn Mode can be repeated as often as desired.

In normal operation, pressing the red button once clears the built-in buffer (Clear). Pressing twice prints out the buffer contents again (Copy).

Handshake: The interface performs hardware handshake and XON/XOFF handshake. The built-in overrun buffer ensures that no data are lost when the computer sends up to 4 KBytes after Handshake Stop.

Code conversion: The interface can convert in either direction between German ASCII and IBM code.

Manually setting the serial parameters

In addition to Learn Mode, the interface allows you to set the serial parameters manually using DIL switches, which are accessible after opening the interface housing. The meaning of the DIL switches is described in the following tables:

Baudrate	S1	S2	S3
300 Bd	off	off	off
1200 Bd	ON	off	off
2400 Bd	off	ON	off
4800 Bd	ON	ON	off
9600 Bd	off	off	ON
19200 Bd	ON	off	ON
38400 Bd	off	ON	ON
76800 Bd	ON	ON	ON

Parity	S5	S6
no	ON	off
odd	off	ON
even	ON	ON
Learnmode	off	off

Code conversion	S7	S8
no	ON	ON
GRASCII > IBM	off	ON
IBM > GRASCII	ON	off

Data bit	S4
7	ON
8	off

Connector and pinouts

The RS422 connection on the interface is configured as a 25-pin SUB-D female connector. The pinouts for this connector must in general be adapted to the pinouts of the data source when installing the device. This can be done using an adapter cable or by modifying the interface plug assignments. The interface pin assignments are shown in the following table.

Signal	Pin#
Data Out A (-)	10
Data In A (-)	11
Signal GND	14
Hands. Out A (-)	15
Hands. Out B (+)	16
Data Out B (+)	22
Data In B (+)	23

Technical Specifications

Baud rate:	300 .. 76.800 Baud
Data format:	7,8 data bits, No,Even,Odd Parity
Handshake:	hardware handshake XON-/XOFF handshake
Electr. insulation:	none
Buffer:	8K (4K + 4K overflow buffer)
Input:	25-pin SUB-D connector incl. 2m cable on the unit
Output:	36-pin Centronics connector, interface can be connected directly to the printer
Supply current:	ca. 120 mA
Supply voltage:	Plug-in power supply provided
Housing:	Plastic, 75x61x20 mm
Weight:	425 g incl. power supply
Included:	1x Interface RS422 > Centronics 1x plug-in power supply for office use