

Product overview:

## Printer interfaces

### Printer interfaces and line drivers

<p>#82000</p>  <p><b>RS232 &gt; Centronics, self-powered</b></p> <p>with power supply from the connected interfaces</p>	<p>#82005</p>  <p><b>RS232 &gt; Centronics, 5KV isolated</b></p> <p>RS232 printer interface with integrated galvanic isolation</p>	<p>#82009</p>  <p><b>RS232 &gt; Centronics, standard version</b></p> <p>RS232 printer interface with integrated security buffer</p>
<p>#42009</p>  <p><b>20mA &gt; Centronics</b></p> <p>Connect parallel printers to 20mA ports</p>	<p>#62009</p>  <p><b>RS422 &gt; Centronics</b></p> <p>Operate parallel printers on RS422 ports</p>	<p>#20001</p>  <p><b>Centronics Line Driver Set</b></p> <p>Operate parallel printers at distances up to 1000m</p>

### Interfaces with Centronics input

<p>#28000</p>  <p><b>Centronics &gt; RS232</b></p> <p>Operate RS232 printers on a parallel port</p>	<p>#26000</p>  <p><b>Centronics &gt; RS422</b></p> <p>Control RS422 devices via Centronics interface</p>	<p>#24000</p>  <p><b>Centronics &gt; 20mA</b></p> <p>Keep using 20mA printers on a parallel port</p>
--	---	--