


Application for the Web-IO Digital:


Configuring the Web-IO Digital for MQTT Box-to-Box

MQTT basic settings for Box-to-Box

- To change the configuration of the Web-IO you first need to obtain the necessary access rights by entering the administrator password.

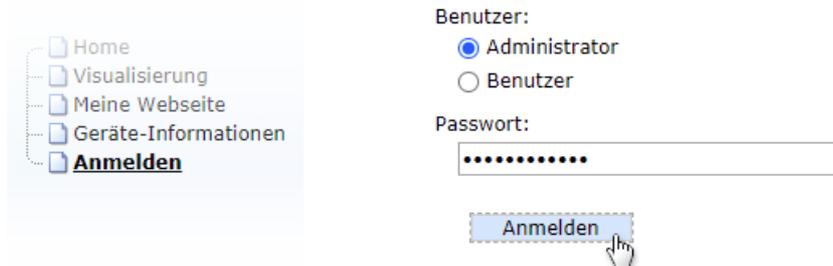

- Then in the menu tree select *Communication channels >> MQTT*.
- Now in the configuration window enter all the parameters relevant to the selected MQTT broker.

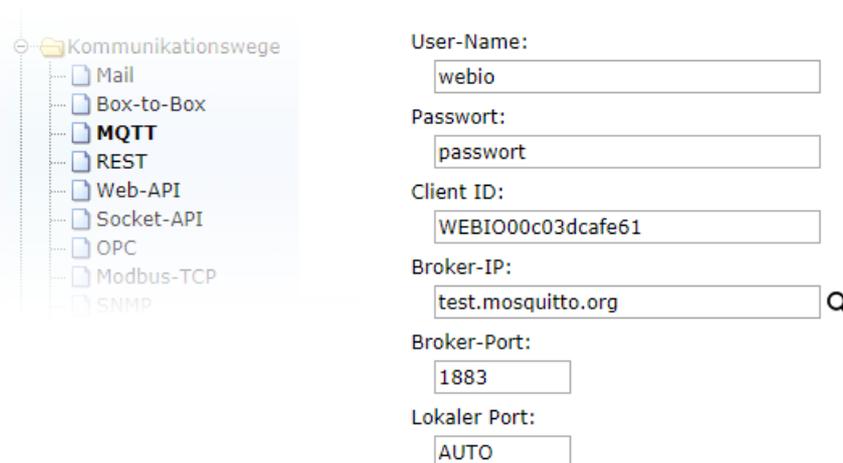

The minimal configuration includes the *Broker-IP* and broker name, the *broker port* as well as the interval for monitoring the connection. Whether *Username*, *password* and *Client-ID* are required depends on the broker settings.

- By enabling *Use encrypted TLS connection* you are specifying whether data should be exchanged with the broker TLS in encrypted format.

Configure and enable outputs for switching via MQTT Subscribe

- Now in the lower section of the configuration window enable *Publish and Subscribe with W&T standard topics*.



aktiviert (MQTT muss ebenfalls aktiviert sein)

<Gerätename>:

wut-09108a

Schalten der Outputs über Subscribe

Outputs freigeben:

Output 0

Output 1

Quality of Service:

QoS 1 - min. einmal empfangen ▼

- Check the box for *Switch outputs using subscribe* and enable the desired outputs for switching.
- The outputs can now be switched using the description of the topics `[Devicename]/set/output/[No.]` by a corresponding Publish on the other Web-IO.



We are available to you in person:

Wiesemann & Theis GmbH

Porschestr. 12

42279 Wuppertal

Phone: +49 202/2680-110 (Mon.-Fri. 8 a.m. to 5 p.m.)

Fax: +49 202/2680-265

info@wut.de

© Wiesemann & Theis GmbH, subject to mistakes and changes: Since we can make mistakes, none of our statements should be applied without verification. Please let us know of any errors or misunderstandings you find so that we can become aware of and eliminate them.

[Data Privacy](#)