

Applications for Web-Thermometer / Web-IO Digital:

## Query data loggers in the browser

The complete contents of the data logger can be queried by a mouse click in the Web browser.

Product overview


Application overview



After the device has been configured for and connected to your network, the following steps are still necessary.



Open the "user" page from the device by simply writing it behind the address of the device in the address line.

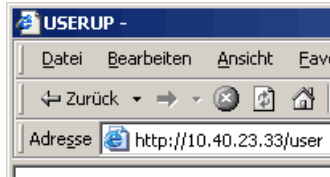

Select the desired time schedule for the output.

**Data Logger**

<p><b>Ausgabe Datalogger</b></p> <p>1 Min</p> <p>OK</p>	<p><b>Download Excelformat</b></p> <p>1 Min</p> <p>OK</p>
---	---

The device will provide you with the desired values in your browser.

**Data Logger**

last update: Mi, KW18,  
03.05.2006 08:36:44 \*(UTC +02)

Datum	Tag	Uhrzeit	Sensor 1	Sensor 2
03.05.2006	Mi	08:36	32,4	25,0
03.05.2006	Mi	08:35	32,6	25,0
03.05.2006	Mi	08:34	33,1	25,0
03.05.2006	Mi	08:33	33,1	24,9
03.05.2006	Mi	08:32	32,5	24,9
03.05.2006	Mi	08:31	31,7	24,9
03.05.2006	Mi	08:30	31,8	24,8
03.05.2006	Mi	08:29	32,0	24,8
03.05.2006	Mi	08:28	32,0	24,8
03.05.2006	Mi	08:27	31,9	24,8
03.05.2006	Mi	08:26	32,1	24,7
03.05.2006	Mi	08:25	32,4	24,7
03.05.2006	Mi	08:24	32,6	24,7

Previous application

Next application