

Application for Web Thermometers:

Print graphical display

Product overview


Application overview

To print the graphical display of Web Graphs firmware version 1.50/1.39 and higher the Web browser needs special settings for print behavior. These are explained in the following for three browsers.


- [Configuration of Microsoft Internet Explorer 6.x and higher](#)
- [Configuration of Mozilla Firefox 2.x and higher](#)
- [Configuration of Opera 9.x and higher](#)

Configuration of Microsoft Internet Explorer 6.x and higher

Select Tools -> Internet Options

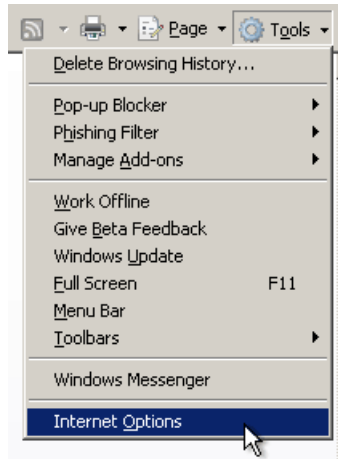


On the Advanced tab check the option "Print background colors and images" and confirm with OK.

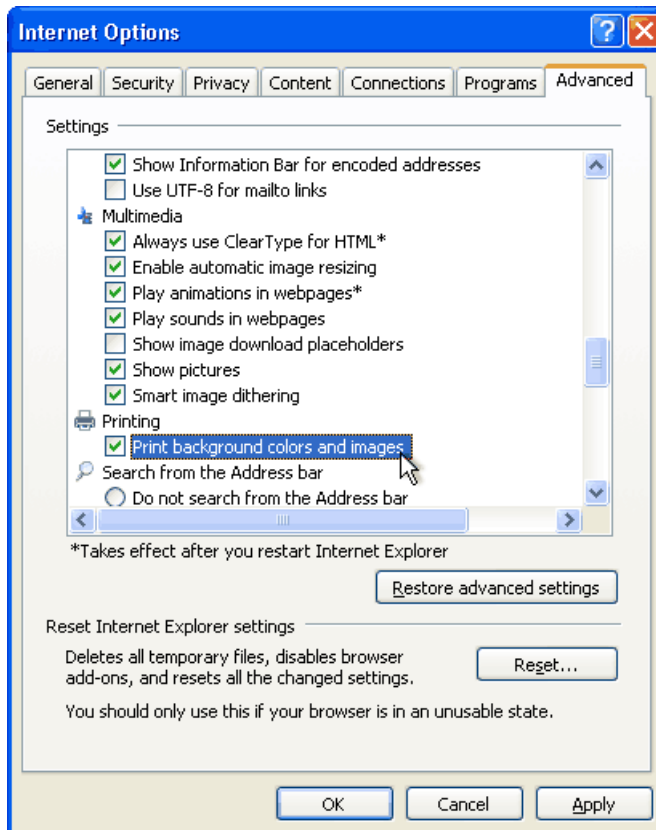


Configuration of Mozilla Firefox 2.x and higher

Select
File -> Page Setup...

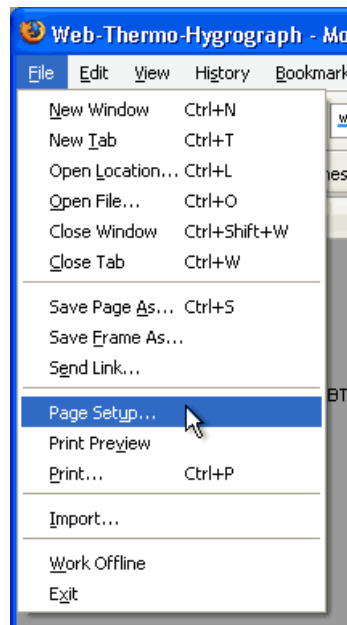


Check the option "Print Background (colors and images)" and confirm with OK.

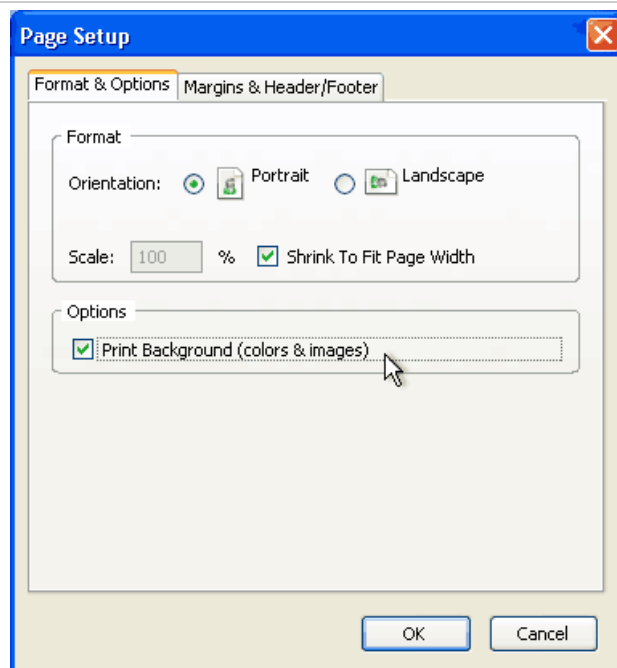


Configuration of Opera 9.x and higher

Select
File -> Print Options...

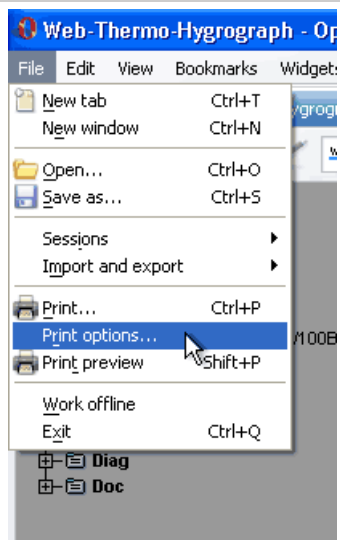

Check the option "Print Page Background" and confirm with OK.

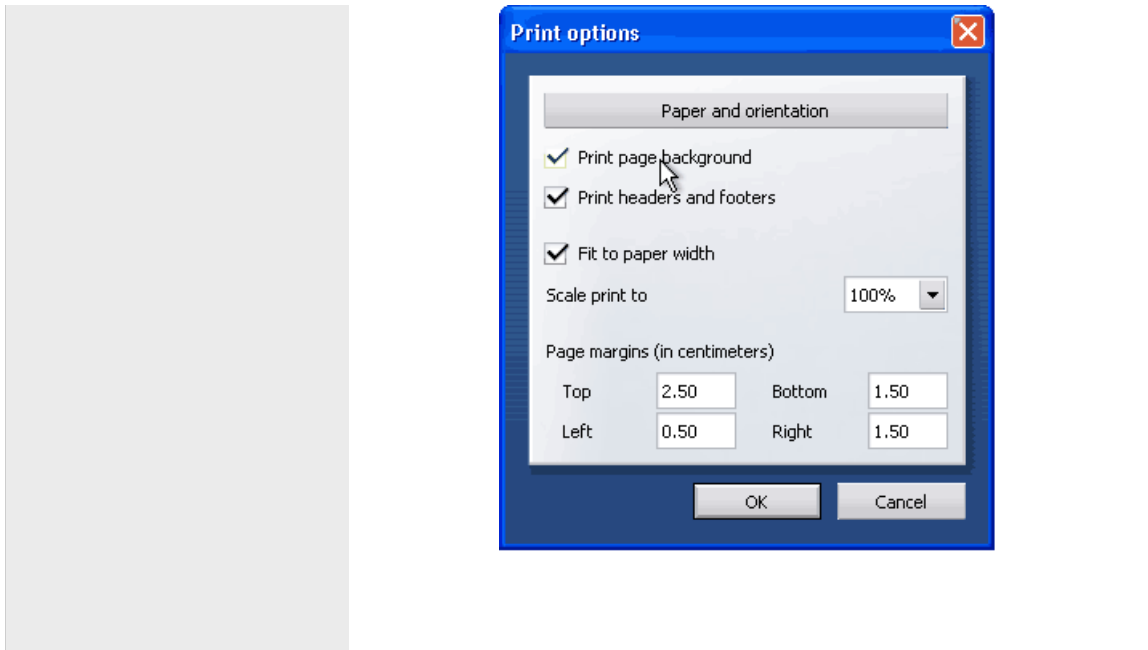

Previous application

Next application



We are available to you in person:

Wiesemann & Theis
GmbH
Porschestra. 12
42279 Wuppertal
Phone: +49 202/2680-110 (Mon.-Fri. 8 a.m. to 5 p.m.)
Fax: +49 202/2680-265
info@wut.de

© Wiesemann & Theis GmbH, subject to mistakes and changes: Since we can make mistakes, none of our statements should be applied without verification. Please let us know of any errors or misunderstandings you find so that we can become aware of and eliminate them.

[Data Privacy](#)