

Manual

Industry Interfaces



Release
Type

1.4
11201, 41201
61201, 61202
64201, 66201
66203, 80201
81201, 81202
84201, 86201
86203, 88205

© 08/2005 by Wiesemann & Theis GmbH

Subject to errors and changes:

Since we can make mistakes, none of our statements should be used without checking. Please let us know of any mistakes or misunderstandings you are aware of, so that we can recognize and eliminate them quickly.

Perform work on and with W&T products only as described here and only if you have read and understood the manual fully. Unauthorized use can result in hazards. We are not liable for the consequences of unauthorized use. When in doubt, check with us or consult your dealer!

Wiesemann & Theis offers with their Industry Interfaces a complete family of interface converters suitable for top hat rail mounting and powered by the 24V supply commonly used in industrial environments.

Trouble-free, noise-immune operation of the associated components is ensured by integrated galvanic isolation between the two interfaces used as well as between the power supply and the interfaces.

This interface family is described on the following pages along with the corresponding technical data and including connection examples.

For up-to-date information on new developments, see our Internet site at <http://www.wut.de> or check the e-mail short notices at the W&T Interface Club, which you can also subscribe to from the W&T Homepage.

Index

| | |
|--|-----|
| RS232 <> 20mA Interface, #84201 | 73 |
| RS232 <> RS422/RS485 Interface, #86201 & 86203 | 77 |
| 20mA <> RS422/RS485 Interface, #64201 | 83 |
| RS232 Isolator, #88205 | 89 |
| RS422/RS485 Isolator, #66201 | 93 |
| Profibus Isolator, #66203 | 99 |
| RS232 <> POF Interface , #81201 | 103 |
| RS232 <> POF Interface with handshake, #81202 | 107 |
| RS422/RS485 <> POF Interface, #61201 | 111 |
| Profibus <> POF Interface, #61202 | 117 |
| 20mA <> POF Interface, #41201 | 121 |
| POF Repeater, #11201 | 127 |
| RS232 Line Driver Set, #80201 | 131 |
| EC Declaration of Conformity | 135 |

RS232 <> 20mA Interface, #84201

The W&T Interface Model 84201 permits bi-directional connection of RS232 devices with components, which are equipped with an 20mA port.

Function

The interface converts one data line in each direction and provides electrical isolation between the RS232 side and the 20mA side. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connectors

The two ports of the interface use DB9 male connectors. The connector pin assignments are shown in the table below:

RS232 interface:

| Pin# | Function |
|------|--------------|
| 2 | data in |
| 3 | data out |
| 4 | active level |
| 5 | signal GND |
| 7 | active level |

20mA interface:

| Pin# | Function |
|------|---------------|
| 1 | data out 20mA |
| 2 | data out + |
| 3 | data out - |
| 4 | data out GND |
| 5 | n.c. |
| 6 | data in 20mA |
| 7 | data in + |
| 8 | data in - |
| 9 | data in GND |


Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.


Applications

The interface can be used as an active or passive 20mA component. In the active mode the interface supplies the current required by the respective 20mA loop, while in the passive mode the loop current must be supplied by the connected device. The operating mode can be selected for both loops separately. Examples of interface switching into active/ passive mode are shown on the following drawings:


Interface Tx and Rx loop active

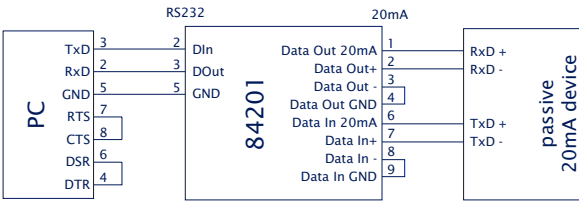

Interface Tx and Rx loop passive

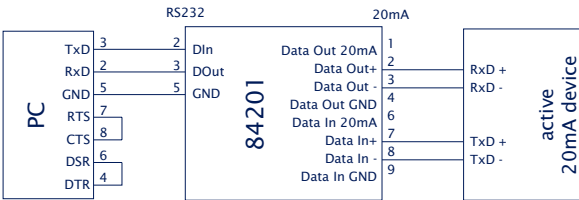

Interface Tx loop active, interface Rx loop passive

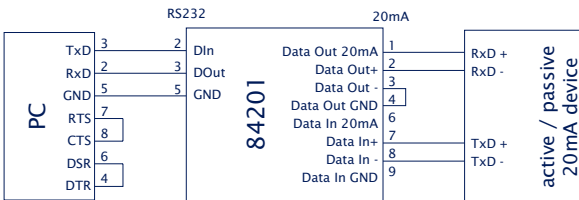

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..19,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Operating modes: | active or passive mode |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 175mA @12V DC |
| RS232 adapter: | 9-pin male SUB-D adapter |
| 20mA adapter: | 9-pin male SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 <> 20mA Interface power adapter for application in office |

RS232 <> RS422/RS485 Interfaces, #86201 & 86203

The W&T Interface Model 86201 and Model 86203 permit bi-directional connection of RS232 devices with components, which are equipped with an RS422 or RS485 port.

Function

The interfaces convert one data line and one handshaking line in each direction and provide electrical isolation between the RS232 side and the RS422/RS485 side. The interfaces are build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

Both interfaces use a build-in switching regulator for power supply and have a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interfaces have a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the devices are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Overvoltage protection (Model 86203 only)

The maximum differential voltage allowed to reach the RS485 transceiver chip of the interfaces from the outside is around $\pm 12 \dots 14V$ according to the data sheets. Voltage exceeding this amount will inevitably result in destruction of the line drivers.

Interface model 86203 has integrated overvoltage protection which uses suppressor diodes to limit the maximum voltage to approx. $\pm 9V$.

This overvoltage protection is limited of course by the capacity of the protection diodes used, which can let through a current of 20A for a short time. This means it may not be a substitute for a lightning surge arrestor for long cables in exposed locations (e.g. in the mountains).

Connectors

The two ports of the interfaces use DB9 male connectors. The connector pin assignments are shown in the table below:

RS232 interface:

| Pin# | Function |
|------|---------------|
| 2 | data in |
| 3 | data out |
| 4 | handshake out |
| 5 | signal GND |
| 8 | handshake in |

RS422/RS485 interface:

| Pin# | Function |
|------|---------------------|
| 1 | data out A (-) |
| 2 | data in A (-) |
| 3 | handshake out A (-) |
| 4 | handshake in A (-) |
| 5 | signal GND |
| 6 | data out B (+) |
| 7 | data in B (+) |
| 8 | handshake out B (+) |
| 9 | handshake in B (+) |

Display elements

The interfaces include two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Operating mode

The interfaces can be set for five operating modes by DIP switch setting on the RS422/RS485 interface module. The selectable operating modes are briefly described here:

RS422, RS485 4-wire bus master application

One data channel and one handshake channel in each direction are available. The RS422/RS485 receivers and transmitters are always active in this operating mode.

RS485 4-wire / 2-wire application with echo, handshake control

One data channel in each direction is available. The RS485 output driver is activated with a positive RS232 handshake in signal, while a negative signal forces the driver to high impedance state. The RS485 receiving channel is always active in this operating mode.

RS485, 2-wire application without echo, handshake control

One data channel in each direction is available. The RS485 output driver is activated with a positive RS232 handshake in signal, while a negative signal forces the driver to high impedance state. The RS485 receiving channel is deactivated when the driver is on, but is switched on when the driver is in the high impedance state.

RS485, 4 wire application / RS485 2-wire application with echo, automatic control

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is always active in this operating mode.

RS485, 2 wire application without echo, automatic control

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is deactivated

when the driver is on, but is switched on when the driver is in the high impedance state

Setting the operating modes


To configure the RS485 / RS422 Interfaces, the enclosure must be opened to set the mode type/termination DIL switches on the interface module. For this purpose we recommend threading a SUB-D connector with connector body onto the Interface and use the threaded-on connector to assist in removing the housing cover from the housing body.

Please see the following table for an explanation of the operating mode DIP switch:

| Operating mode | SW1 | SW2 | SW3 | SW4 | SW5 | SW8 |
|--|-----|-----|-----|-----|-----|-----|
| RS422, RS485, 4-wire bus master | OFF | OFF | OFF | ON | OFF | OFF |
| RS485, 4-wire / 2-wire with echo, handshake control | OFF | OFF | ON | ON | OFF | OFF |
| RS485, 4-wire / 2-wire without echo, handshake control | ON | OFF | ON | ON | OFF | OFF |
| RS485, 4-wire / 2-wire with echo, automatic control | OFF | ON | OFF | ON | OFF | OFF |
| RS485, 4-wire / 2-wire without echo, automatic control | ON | ON | OFF | ON | OFF | OFF |


Termination

For all RS485 operating modes it is essential that the bus system be terminated with a termination network which assures a defined rest state in the high-impedance phases of bus operation. The bus system can be connected to a termination network by closing switches #6 and #7 on the interface module.

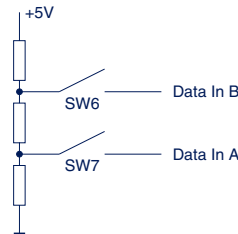


Applications


RS422 hardware handshake application

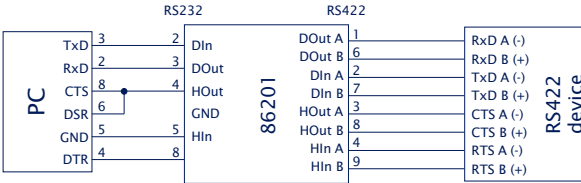


RS485 4-wire bus master application

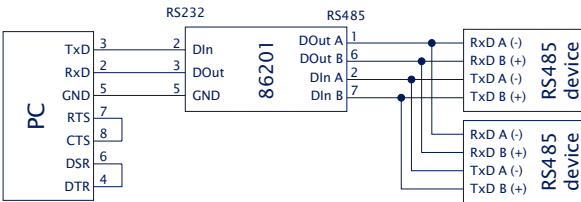

RS485 2-wire application with handshake control

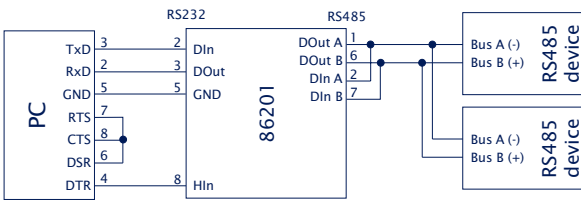

RS485 2-wire application with automatic control

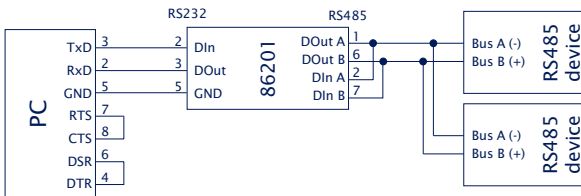

Technical Data

| | |
|-------------------------|---|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD, CTS, DTR |
| Operating modes: | RS422 RS485: 2/4 wire mode, with or without echo, handshake or automatic control |
| Termination: | Switchable termination network for RS485 operation |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| Overvoltage protection: | Model 86203 only: limiting of differential voltage by suppressor diodes to $V_{max} = 9,2V$ ($I_{max} = 20A$, $t = 10ms$) |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 150mA @12V DC |
| RS232 adapter: | 9-pin male SUB-D adapter |
| RS422/RS485 adapter: | 9-pin male SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 <-> RS422/RS485 Interface power adapter for application in office |

20mA ↔ RS422/RS485 Interface, #64201

The W&T Interface Model 64201 permits bi-directional connection of 20mA devices with components, which are equipped with an RS422 or RS485 port.

Function

The interface converts one data line in each direction and provides electrical isolation between the 20mA side and the RS422/RS485 side. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connectors

The two ports of the interface use DB9 male connectors. The connector pin assignments are shown in the table below:

RS422/RS485 interface:

| Pin# | Function |
|------|----------------|
| 1 | data out A (-) |
| 2 | data in A (-) |
| 5 | signal GND |
| 6 | data out B (+) |
| 7 | data in B (+) |

20mA interface:

| Pin# | Function |
|------|---------------|
| 1 | data out 20mA |
| 2 | data out + |
| 3 | data out - |
| 4 | data out GND |
| 5 | n.c. |
| 6 | data in 20mA |
| 7 | data in + |
| 8 | data in - |
| 9 | data in GND |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Operating modes

20mA interface

The interface can be used as an active or passive 20mA component. In the active mode, the interface supplies the current required by the respective 20mA loop, while in the passive mode the loop current must be supplied by the connected device. The operating mode can be selected for both loops separately.

RS422/RS485 interface

The interface can be set for three operating modes by DIP switch setting on the RS422/RS485 interface module. The selectable operating modes are briefly described here:

RS422, RS485 4-wire bus master application

One data channel and one handshake channel in each direction are available. The RS422/RS485 receivers and transmitters are always active in this operating mode.

RS485 4-wire bus systems

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is always active in this operating mode.

RS485 2-wire bus systems

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is deactivated when the driver is on, but is switched on when the driver is in the high impedance state.

Setting the operating modes

To configure the RS485 / RS422 Interfaces, the enclosure must be opened to set the mode type/termination DIL switches on the interface module. For this purpose we recommend threading a SUB-D connector with connector body onto the Interface and use the threaded-on connector to assist in removing the housing cover from the housing body.


Please see the following table for an explanation of the operating mode DIP switch:

| Betriebsart | SW1 | SW2 | SW3 | SW4 | SW5 | SW8 |
|----------------------------------|-----|-----|-----|-----|-----|-----|
| RS422, RS485, 4-Draht-Bus-Master | OFF | OFF | OFF | ON | OFF | OFF |
| RS485, 4-Draht-Bussysteme | OFF | ON | OFF | ON | OFF | OFF |
| RS485, 2-Draht-Bussysteme | ON | ON | OFF | ON | OFF | OFF |

Termination


For all RS485 operating modes it is essential that the bus system be terminated with a termination network which assures a defined rest state in the high-impedance phases of bus operation.

The bus system can be connected to a termination network by closing switches #6 and #7 on the interface module:

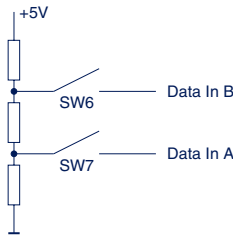


Applications


Interface Tx and Rx loop active

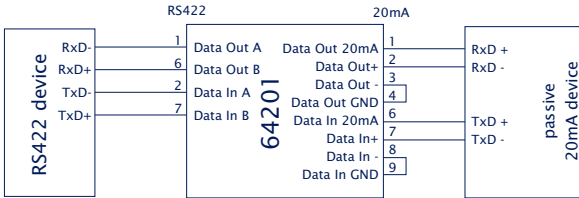


Interface Tx and Rx loop passive

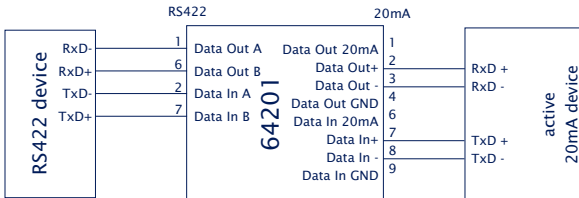

Interface Tx loop active, interface Rx loop passive

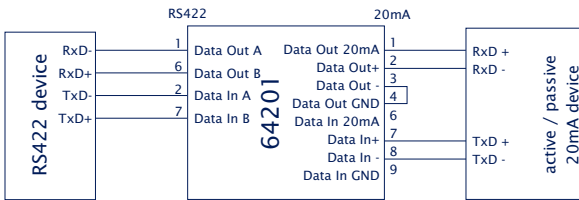

RS485 ⇔ 20mA, interface Tx loop active, interface Rx loop passive

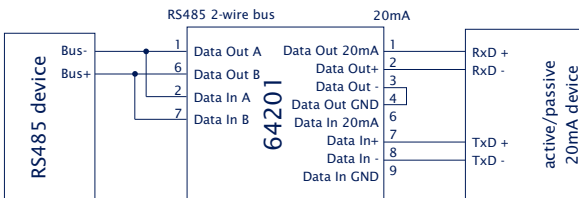

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..19,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Operating modes: | RS422 RS485: 2-/4-wire mode, automatic control 20mA: active or passive mode |
| Termination: | Switchable termination network for RS485 operation |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 140mA @12V DC |
| 20mA adapter: | 9-pin male SUB-D adapter |
| RS422/RS485 adapter: | 9-pin male SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | 20mA <> RS422/RS485 Interface power adapter for application in office |

RS232 Isolator, #88205

The W&T RS232 Isolator Model 88205 permits bi-directional connection of two RS232 devices with an electrical isolation voltage of 1000 Volts.

Function

The isolator supports all data and handshaking lines of 9 pin RS232 interfaces and has two mutually independent, active RS232 interfaces. Therefore the isolator can be used as a RS232 repeater device to double the permissible cable length by inserting the isolator in the middle of the transmission line. The RS232 isolator is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The isolator uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connectors

The DTE port of the isolator uses a 9-pin male SUB-D connector, while the DCE port uses an 9-pin female SUB-D connector. The connector pin assignments are shown in the table below:

RS232 DCE interface (9-pin female)

| Pin# | Function | Direction |
|------|----------|-----------|
| 1 | DCD | output |
| 2 | RxD | output |
| 3 | TxD | input |
| 4 | DTR | input |
| 5 | GND | GND |
| 6 | DSR | output |
| 7 | RTS | input |
| 8 | CTS | output |
| 9 | RI | output |

RS232 DTE interface (9-pin male)


| Pin# | Function | Direction |
|------|----------|-----------|
| 1 | DCD | input |
| 2 | RxD | input |
| 3 | TxD | output |
| 4 | DTR | output |
| 5 | GND | GND |
| 6 | DSR | input |
| 7 | RTS | output |
| 8 | CTS | input |
| 9 | RI | input |

Display elements


The isolator includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Applications

hardware handshake controlled PC <-> modem communication

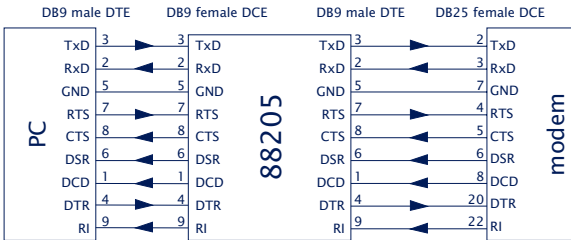

software handshake controlled PC <-> PC communication

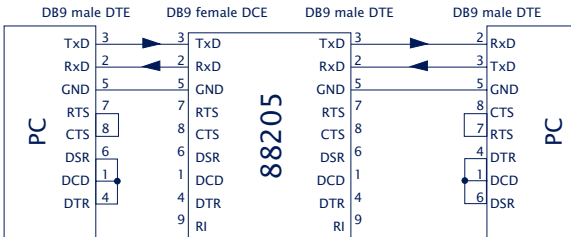

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD, RTS, CTS, DSR, DCD, DTR, RI |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 150mA @12V DC |
| RS232 DTE adapter: | 9-pin male SUB-D adapter |
| RS232 DCE adapter: | 9-pin female SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 Isolator power adapter for application in office |

RS422 / RS485 Isolator, #66201

The W&T RS422/RS485 Isolator Model 66201 permits bi-directional connection of two RS422 devices or RS485 bus systems with an electrical isolation voltage of 1000 Volts.

Function

In RS422 mode the isolator supports one data and one handshaking line in each direction. In RS485 mode the isolator supports 2-wire and 4-wire bus systems. The repeater is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The isolator uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connectors

The two ports of the device use DB9 male connectors. The connector pin assignments are shown in the table below:

| Pin# | Function |
|------|---------------------|
| 1 | data out A (-) |
| 2 | data in A (-) |
| 3 | handshake out A (-) |
| 4 | handshake in A (-) |
| 5 | signal GND |
| 6 | data out B (+) |
| 7 | data in B (+) |
| 8 | handshake out B (+) |
| 9 | handshake in B (+) |

Display elements

The isolator includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Operating mode

The isolator can be set for three operating modes by DIP switch setting on the RS422/RS485 interface module. The selectable operating modes are briefly described here:

RS422

One data channel and one handshake channel in each direction are available. The RS422/RS485 receivers and transmitters are always active in this operating mode.

RS485 4-wire bus systems

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is always active in this operating mode.

RS485 2-wire bus systems

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is deactivated when the driver is on, but is switched on when the driver is in the high impedance state.

Setting the operating modes

To configure the RS485 / RS422 Interfaces, the enclosure must be opened to set the mode type/termination DIL switches on the interface module. For this purpose we recommend threading a SUB-D connector with connector body onto the Interface and use the threaded-on connector to assist in removing the housing cover from the housing body.


Please see the following table for an explanation of the operating mode DIP switch:

| Operating mode | SW1 | SW2 | SW3 | SW4 | SW5 | SW8 |
|--------------------------|-----|-----|-----|-----|-----|-----|
| RS422 | OFF | OFF | OFF | ON | OFF | OFF |
| RS485, 4-wire bus system | OFF | ON | OFF | ON | OFF | OFF |
| RS485, 2-wire bus system | ON | ON | OFF | ON | OFF | OFF |

Termination


For all RS485 operating modes it is essential that the bus system be terminated with a termination network which assures a defined rest state in the high-impedance phases of bus operation.

The bus system can be connected to a termination network by closing switches #6 and #7 on the interface module:

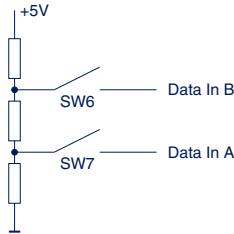


Applications

RS422 hardware handshake application

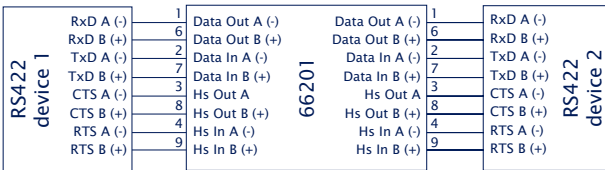

RS485 2-wire application

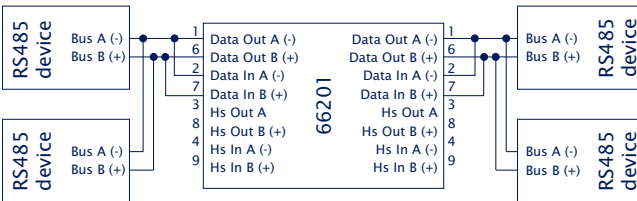

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..3 Mbaud |
| Data format: | any format |
| Supported signals: | RxD, TxD, CTS, DTR |
| Operating modes: | RS422 RS485 2-/4-wire mode automatic control |
| Termination: | Switchable termination network for RS485 operation |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 140mA @12V DC |
| RS422/RS485 adapter: | 9-pin male SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS422/RS485 Isolator power adapter for application in office |

Profibus Isolator, #66203

The W&T Profibus Isolator Model 66203 permits bi-directional connection of Profibus devices with an electrical isolation voltage of 1000 Volts.

Function

The device functions as an RS485 isolator for 2-wire bus systems, with automatic direction control up to a maximum baud rate of 3 Mbaud. The repeater is built in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The isolator uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The two ports of the device use DB9 female connectors. The connector pin assignments are shown in the table below:

| Pin# | Function |
|------|-----------|
| 1 | Shield |
| 2 | n.c. |
| 3 | RxD/TxD-P |
| 4 | CNTR-P |
| 5 | DGND |
| 6 | VP |
| 7 | n.c. |
| 8 | RxD/TxD-N |
| 9 | CNTR-N |

Display elements

The isolator includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Termination

Both ends of a Profibus segment must be terminated with a terminating network which is usually integrated into the Profibus connectors and can be optionally switched. This resistor network has two functions: to ensure reflection-free termination of the line, and to provide a defined rest state on the lines during the high-impedence phases of the bus system.

To supply the termination network, Pin 6 provides 5V referenced to the ground Pin 5, with a maximum load capacity of 50mA.

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..3 Mbaud |
| Data format: | any format |
| Supported signals: | Bus A/B Vcc and GND for supply of the external termination network |
| Operating mode: | RS485 2-wire mode without echo, automatic control |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 160mA @12V DC |
| Profibus adapter: | 9-pin female SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x45mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | Profibus Isolator power adapter for application in office |

RS232 <> POF Interface, #81201

The W&T Interface Model 81201 permits bi-directional connection of RS232 devices with components, which are equipped with plastic fiber optics interface.

Function

The Interface supports one data line in each direction and transmits data over a distance of max. 100 meters. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

The RS232 port of the device is isolated from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The fiber optic connection for the interface is configured as a self-locking coupling for duplex plastic fiber optics, with the RS232 interface formatted as DB9 male connector. Refer to the following table for connector pin assignments:

| Pin# | Function |
|------|--------------|
| 2 | data in |
| 3 | data out |
| 4 | active level |
| 5 | signal GND |
| 7 | active level |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the interface requires no special tools:

- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm.
- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.



- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.

The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.

Applications

RS232 <> POF application without hardware handshake

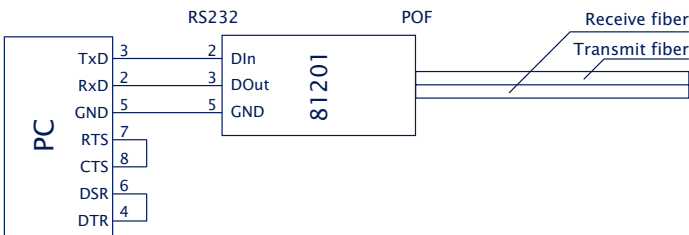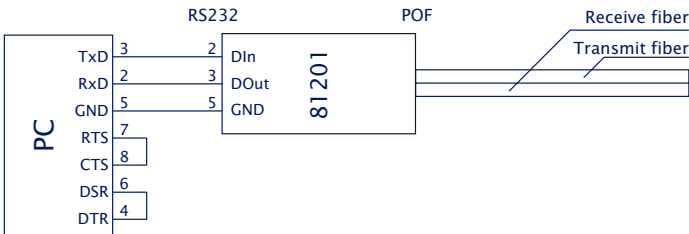

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Max. distance: | 100m |
| Electrical Isolation: | Serial port from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 130mA @12V DC |
| RS232 adapter: | 9-pin male SUB-D adapter |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 <-> POF Interface power adapter for application in office |

RS232 <> POF Interface with handshake, #81202

The W&T Interface Model 81202 permits bi-directional connection of RS232 devices with components, which are equipped with plastic fiber optics interface.

Function

The Interface supports one data line and one handshake line in each direction and transmits data over a distance of max. 50 meters. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

The RS232 port of the device is isolated from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The fiber optic connection for the interface is configured as a self-locking coupling for duplex plastic fiber optics, with the RS232 interface formatted as DB9 male connector. Refer to the following table for connector pin assignments:

| Pin# | Function |
|------|---------------|
| 2 | data in |
| 3 | data out |
| 4 | active level |
| 5 | signal GND |
| 7 | handshake out |
| 8 | handshake in |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the interface requires no special tools:

- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm.
- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.



- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.

The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.

Applications

RS232 <> POF application with hardware handshake

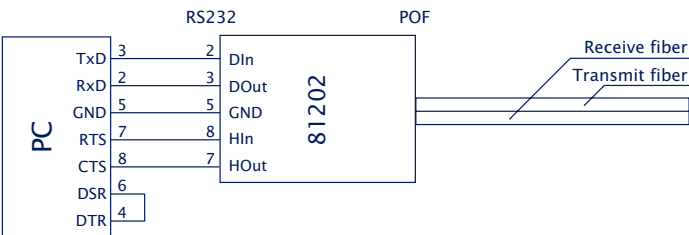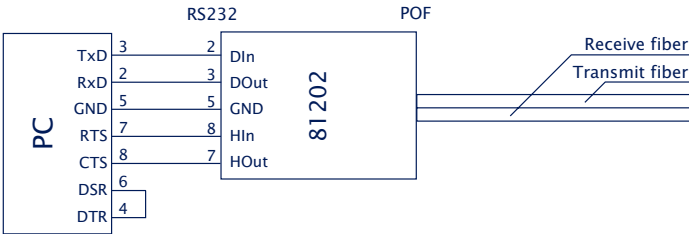

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..57,600 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD, RTS, CTS |
| Max. distance: | 50m |
| Electrical Isolation: | Serial port from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 170mA @12V DC |
| RS232 adapter: | 9-pin male SUB-D adapter |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 <> POF Interface power adapter for application in office |

RS422/RS485 <> POF Interface, #61201

The W&T Interface Model 61201 permits bi-directional connection of RS422 and RS485 devices with components, which are equipped with a plastic fiber optics interface.

Function

The Interface supports one data line in each direction and transmits data over a distance of max. 100 meters. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

The RS422/RS485 port of the device is isolated from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The fiber optic connection for the interface is configured as a self-locking coupling for duplex plastic fiber optics, with the RS422/RS485 interface formatted as DB9 male connector. Refer to the following table for connector pin assignments:

| Pin# | Function |
|------|----------------|
| 1 | data out A (-) |
| 2 | data in A (-) |
| 5 | signal GND |
| 6 | data out B (+) |
| 7 | data in B (+) |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the interface requires no special tools:

- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm.

- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.
- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.

The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.

Operating Mode

The interface can be set for three operating modes by DIP switch setting on the RS422/RS485 interface module. The selectable operating modes are briefly described here:

RS422, RS485 4-wire bus master application

One data channel and one handshake channel in each direction are available. The RS422/RS485 receivers and transmitters are always active in this operating mode.

RS485, 4 wire / 2-wire application with echo, automatic control

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is always active in this operating mode.

RS485, 2 wire application without echo, automatic control

One data channel in each direction is available. The RS485 output driver is activated automatically with each transmission of data, and goes to the high impedance state again after the end of transmission. The RS485 receiving channel is deactivated when the driver is on, but is switched on when the driver is in the high impedance state.

Setting the operating modes


To configure the RS485 / RS422 Interfaces, the enclosure must be opened to set the mode type/termination DIP switches on the interface module. For this purpose we recommend threading a SUB-D connector with connector body onto the Interface and use the threaded-on connector to assist in removing the housing cover from the housing body.

Please see the following table for an explanation of the operating mode DIP switch:

| Operating mode | SW1 | SW2 | SW3 | SW4 | SW5 | SW8 |
|------------------------------------|-----|-----|-----|-----|-----|-----|
| RS422, RS485, 4-wire bus master | OFF | OFF | OFF | ON | OFF | OFF |
| RS485, 4-wire / 2-wire with echo | OFF | ON | OFF | ON | OFF | OFF |
| RS485, 2-wire bus systems w/o echo | ON | ON | OFF | ON | OFF | OFF |

Termination

For all RS485 operating modes it is essential that the bus system be terminated with a termination network which assures a defined rest state in the high-impedance phases of bus operation. The bus system can be connected to a termination network by closing switches #6 and #7 on the interface module:

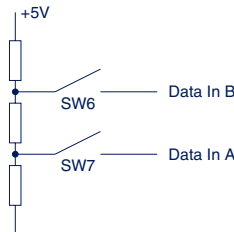


Applications


RS422 <> POF application



RS485 4-wire bus master <-> POF application

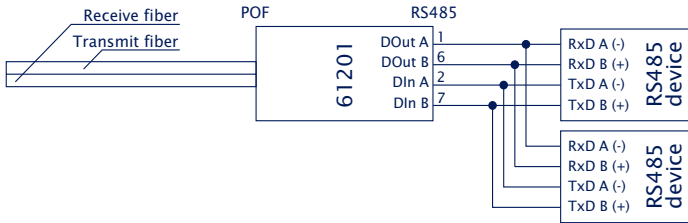

RS485 2-wire <-> POF application

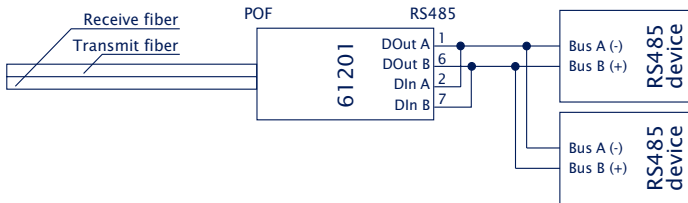

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Max. distance: | 100m |
| Operating modes: | RS422 RS485 2-/4-wire mode automatic control |
| Electrical Isolation: | Serial port from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Termination: | Switchable termination network for RS485 operation |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 160mA @12V DC |
| RS422/RS485 adapter: | 9-pin male SUB-D adapter |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS422/RS485 <> POF Interface power adapter for application in office |

Profibus <> POF Interface, #61202

The W&T Interface Model 61202 permits bi-directional connection of Profibus devices with components, which are equipped with a plastic fiber optics interface.

Function

The Interface supports one data line in each direction and transmits data over a distance of max. 100 meters. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

The Profibus port of the device is isolated from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The fiber optic connection for the interface is configured as a self-locking coupling for duplex plastic fiber optics, with the Profibus interface formatted as DB9 female connector. Refer to the following table for connector pin assignments:

| Pin# | Function |
|------|-----------|
| 1 | Shield |
| 2 | n.c. |
| 3 | RxD/TxD-P |
| 4 | CNTR-P |
| 5 | DGND |
| 6 | VP |
| 7 | n.c. |
| 8 | RxD/TxD-N |
| 9 | CNTR-N |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the interface requires no special tools:

- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm.

- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.
- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.

The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.

Termination

Both ends of a Profibus segment must be terminated with a terminating network which is usually integrated into the Profibus connectors and can be optionally switched. This resistor network has two functions: to ensure reflection-free termination of the line, and to provide a defined rest state on the lines during the high-impedance phases of the bus system.

To supply the termination network, Pin 6 provides 5V referenced to the ground Pin 5, with a maximum load capacity of 50mA.

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | Bus A/B Vcc and GND for supply of the external termination network |
| Max. distance: | 100m |
| Operating mode: | RS485 2-wire mode without echo, automatic control |
| Electrical Isolation: | Serial port from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 150mA @12V DC |
| Profibus adapter: | 9-pin female SUB-D adapter |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | Profibus <> POF Interface power adapter for application in office |

20mA <> POF Interface, #41201

The W&T Interface Model 41201 permits bi-directional connection of 20mA devices with components, which are equipped with a plastic fiber optics interface.

Function

The Interface supports one data line in each direction and transmits data over a distance of max. 100 meters. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interface uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

The 20mA port of the device is isolated from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connections

The fiber optic connection for the interface is configured as a self-locking coupling for duplex plastic fiber optics, with the 20mA interface formatted as DB9 male connector. Refer to the following table for connector pin assignments:

| Pin# | Function |
|------|---------------|
| 1 | data out 20mA |
| 2 | data out + |
| 3 | data out - |
| 4 | data out GND |
| 5 | n.c. |
| 6 | data in 20mA |
| 7 | data in + |
| 8 | data in - |
| 9 | data in GND |

Display elements

The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the interface requires no special tools:

- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm.

- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.
- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.


The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.


Applications

The interface can be used as an active or passive 20mA component. In the active mode, the interface supplies the current required by the respective 20mA loop, while in the passive mode the loop current must be supplied by the connected device. The operating mode can be selected for both loops separately. Examples of interface switching into active/passive mode are shown in the following drawings:


Interface Tx and Rx loop active

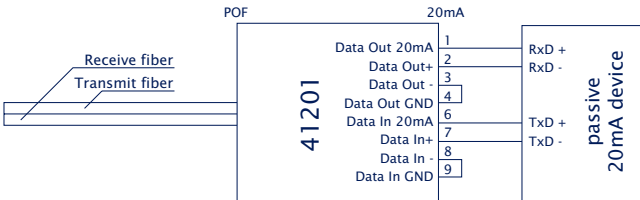

Interface Tx and Rx loop passive

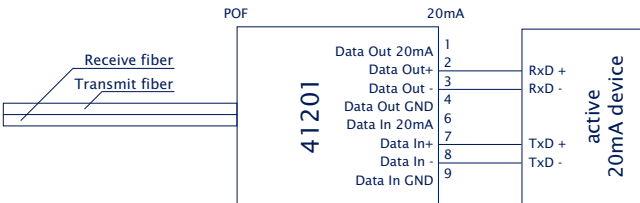

Interface Tx loop active, Rx loop passive

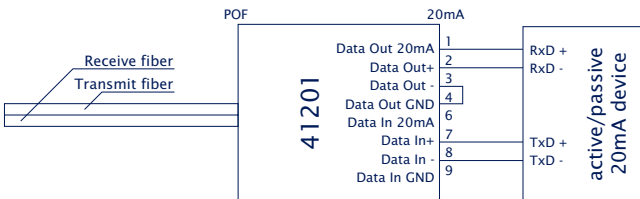

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..19,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Max. distance: | 100m |
| Operating modes: | active or passive mode |
| Electrical Isolation: | Serial port from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 120mA @12V DC |
| 20mA adapter: | 9-pin male SUB-D adapter |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | 20mA <> POF Interface power adapter for application in office |

POF Repeater, #11201

The W&T Fiber Optic Repeater Model 11201 allows two components with plastic fiber optic interfaces to be connected over a distance of more than 100 meters.

Function

As a rule, the transmission distance between two devices with plastic fiber optic interfaces is limited by the high attenuation factor of the fiber optic cable to a maximum of 100 meters. The Repeater is inserted in the center of a long transmission line and amplifies the received light signals, restoring them to their original intensity. By dividing the transmission line into several 100-meter fiber optic segments, reliable data transmission even over very long distances can be achieved. The transmission medium is standard duplex plastic fiber optic cable, which is inexpensive and extremely easy to work with and install. The use of fiber optics as a transmission medium ensures perfect galvanic isolation between the connected devices and clean transmission even in noise-prone environments. The interface is built in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The repeater uses a build-in switching regulator for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interface has a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Connections

The fiber optic connection for the repeater is configured as a self-locking coupling for duplex plastic fiber optics.

Display elements

The repeater includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Assembly

Connecting the plastic fiber optic cable to the repeater requires no special tools:


- Trim the fiber optic cable to the desired length using a sharp knife. Make your cut as close to a right angle to the longitudinal axis of the cable as possible. A simple cut is generally sufficient, with no reworking required.
- Separate the individual duplex conductors back from the cut point to a distance of around 2cm
- Pull the locking levers on the fiber optic female connector back towards the module along the upper side of the coupling.
- At the same time insert the separated end of the fiber optic duplex line into the fiber optic coupling female.
- Releasing the locking levers locks the fiber optics into the coupling.
- To release, pull the two locking levers on the top of the coupling towards the module, and pull the fiber optic cable out of the female.

The arrows on the top side of the coupling clearly show the location of the emitter and receiver lines.

Please note that when connecting two fiber optic components, the emitter of the first must always be connected to the receiver channel of the second component. A visible red light beam is always sent along with data, so that the sending line can always be easily identified.

Applications

RS232 data transmission via plastic fiber optic cable over a distance of more than 100 meters

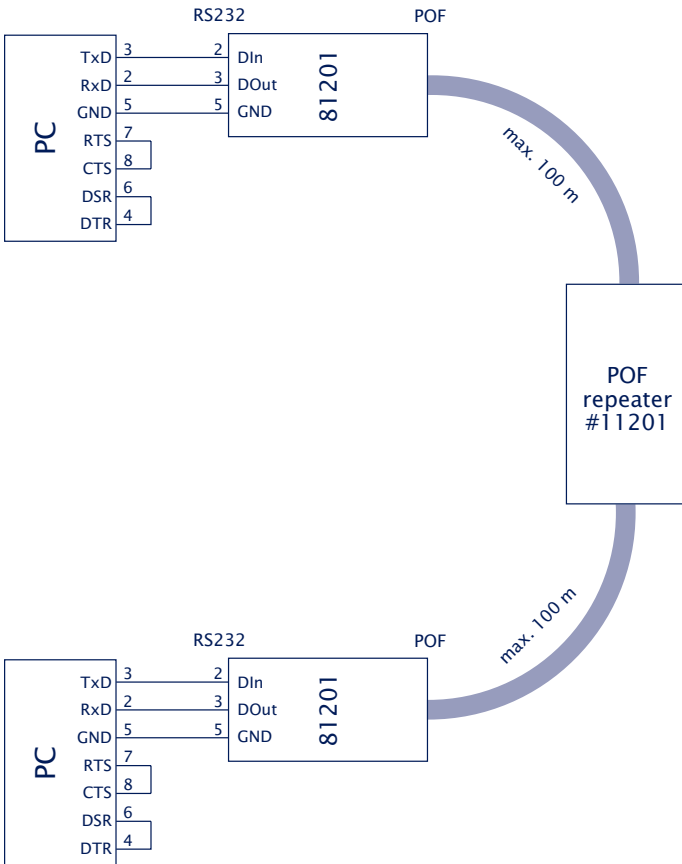

Technical Data

| | |
|-----------------------|--|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD |
| Max. distance: | 100m per POF segment |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 140mA @12V DC |
| POF adapter: | Integrated socket with automatic interlocking of the fiber-optic cable |
| POF medium: | Duplex plastic optical fiber cable 2.2 x 4.4 mm, fiber diameter of 980µm, core: PMMA, cladding: PE |
| Ambient temperature: | storage: -40..+70°C operation: 0..+50°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | POF Repeater power adapter for application in office |

RS232 Line Driver Set, #80201

The W&T Line Driver Set Model 80201 permits bi-directional connection of two RS232 devices over a distance of up to 1.200 meters.

Function

The line driver set consists of two identical interface modules RS232 <> RS422 and supports one data and one handshaking line in each direction.

To avoid the effects of ground potential difference, both ports of the line driver modules are isolated from each other and from the power supply with a dielectric strength of 1000 volts.

The line driver modules must be connected to the RS232 devices by additional shielded serial cables. The pinout of the RS232 cables is shown in the chapter "Applications" of this manual.

The RS232 Line Driver Set modules are build in a small plastic housing designed for top hat rail mounting according to DIN EN 50022-35.

Power supply

The interfaces of the line driver set use build-in switching regulators for power supply and has a wide input voltage range from 12V to 24V. The operating voltage can be supplied by the enclosed AC adaptor or by any other AC or DC voltage in the permissible range. The interfaces have a build-in reverse voltage protection. The power can be supplied by screwed contacts.

Isolation and ESD protection

Both ports of the device are isolated from each other and from the power supply with a dielectric strength of 1000 volts. The signals are isolated by means of high-speed opto-couplers; energy is supplied to the driver and receiver elements by means of an isolated DC/DC converter. All signal lines are protected against electrostatic discharge of up to 15kV according to IEC 801-2, level 4.

Connectors

The two ports of the W&T line driver module 80201 use DB9 male connectors. The connector pin assignments are shown in the table below:

RS232 interface:

| Pin# | Function |
|------|---------------|
| 2 | data in |
| 3 | data out |
| 4 | handshake out |
| 5 | signal GND |
| 8 | handshake in |

RS422 interface:

| Pin# | Function |
|------|---------------------|
| 1 | data out A (-) |
| 2 | data in A (-) |
| 3 | handshake out A (-) |
| 4 | handshake in A (-) |
| 5 | signal GND |
| 6 | data out B (+) |
| 7 | data in B (+) |
| 8 | handshake out B (+) |
| 9 | handshake in B (+) |

Display elements


The interface includes two LEDs, with green for indicating the correct supply voltage and red for verifying data transmission in both directions.

Interconnecting cable


To ensure proper operation over long distances, 4-wire or 8-wire shielded twisted pair (STP) cable should be employed as interconnection cable. Because of the use of balanced RS422 interfaces, every transmitted RS232 signal requires one wire pair of the interconnecting cable. RS232 software handshake communications therefore require 2 pair STP cables, while communications with two additional hardware handshaking lines require 4 pair STP cables. One cable pair must be used for the inverting line (A) and the non-inverting line (B) of the same signal type. The cable shield shall be connected to the shell of the RS422 interface at both ends of the interconnecting cable.

Applications

Bidirectional RS232 application with hardware handshake

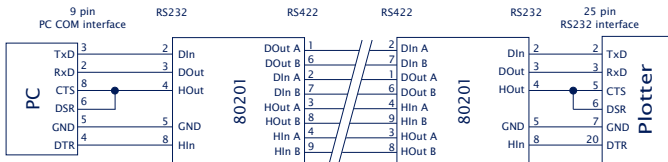

Bidirectional RS232 application with software handshake

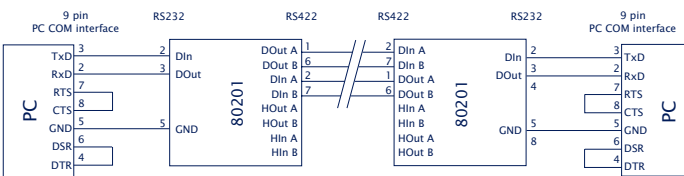

Technical Data

| | |
|-----------------------|---|
| Baud rate: | 0..115,200 baud |
| Data format: | any format |
| Supported signals: | RxD, TxD, CTS, DTR |
| Max. distance: | 1000m |
| Electrical isolation: | both ports from each other and from power supply with a dielectric strength of 1000 volts |
| ESD immunity: | up to 15kV corresponding to IEC 801-2, Level 4 |
| Power supply: | supplied power adapter or 12..24V DC/AC |
| Current consumption: | approx. 160mA @12V DC |
| RS232 adapter: | 9-pin male SUB-D adapter |
| RS422 adapter: | 9-pin male SUB-D adapter |
| Ambient temperature: | storage: -40..+70°C operation: 0..+60°C at external 24V supply voltage |
| Housing / Dimensions: | small plastic housing for top hat rail mounting, 105x75x22mm |
| Weight: | approx. 600g incl. power adapter |
| Delivery: | RS232 Line Driver Set power adapter for application in office |

EC Declaration of conformity



Declaration of conformity according to paragraph 10.1 of directive 89/336/EWG

Wiesemann & Theis GmbH hereby confirms that the products

| | | |
|--------------------------|----------------------|------------|
| Interface RS232 | ⊃ RS422/RS485 | Type 86201 |
| Interface RS232 | ⊃ 20mA | Type 84201 |
| Interface RS422/RS485 | ⊃ 20mA | Type 64201 |
| RS232 Line Driver Set | | Type 80201 |
| RS232 Isolator 1kV | | Type 88205 |
| RS422/RS485 Isolator 1kV | | Type 66201 |
| Profibus Isolator 1kV | | Type 66203 |
| Interface RS232 | ⊃ POF | Type 81201 |
| Interface RS232 | ⊃ POF with handshake | Type 81202 |
| Interface RS422/RS485 | ⊃ POF | Type 61201 |
| Interface Profibus | ⊃ POF | Type 61202 |
| Interface 20mA | ⊃ POF | Type 41201 |
| POF Repeater | | Type 11201 |

fulfill the requirements of the directives / regulations specified below:

1. Emission according to
 - 1.1. EN 55022-8 (1997)
 - 1.2. EN 61000-3-2 (1996)
 - 1.3. EN 61000-3-3 (1996)
2. Noise Immunity according to EN 61000-6-2 (1999):
 - 2.1. EN 61000-4-2 ESD
 - 2.2. EN 61000-4-3 Radiated Immunity
 - 2.3. EN 61000-4-4 Burst
 - 2.4. EN 61000-4-5 Surge
 - 2.5. EN 61000-4-6 Conducted Immunity
 - 2.6. EN 61000-4-8 H-Field
 - 2.7. EN 61000-4-11 Supply Voltage Dips and Interruptions
3. Product-specific Low-Voltage Directive for communications technology
 - 3.1. EN 60950 (1997)

Wuppertal, 04/19/2002


Klaus Meyer


Dipl.-Ing. Rüdiger Theis, Managing Director

Interfaces
für
Netzwerke



serielle
Schnitt-
stellen



und
Druck-
schnitt-
stellen



